Select Language v

Wi-Fi Quick Connection Wifi Connection Setting Local Password Setting

Pocket WiFi Troubleshooting

Local Password Setting

The local password of login the Local Mode of SolaxCloud Monitoring APP is same as the login password of the 5.8.8.8 Wi-Fi setting site.

Follow bellow steps to change the local password.

Step 1: Use a laptop/smartphone to search for inverter Wi-Fi signal from the Pocket WiFi. (SSIDL: Wifi_Sxxxxxxx)

Step 2: Connect to the inverter Wi-Fi signal.

Step 3: Open a browser (Internet Explorer, Firefox or Chrome) and type in http://5.8.8.8/.

Step 4: Type in username and password.(Username: admin; Initial password depends on the Registration No. of your device.For the SWxxxxxxx, initial password is admin;For other Sxxxxxxxx, initial password is same as the Registration No.)

- Step 5: Enter the System setting page.
- Step 6: Type in the old password and new password.
- Step 7: Click save to finish the setting.

*NOTE: The new password must be within 10 digits.

DHCP	Static IP System
Firmware	Version: 2.034.05
Connect with i	nverter:
Connect with	router:
Connect with	server:
Update firmwar	e(.usb): 选择文件 未选择任何文件 Start
Old Pa	ssword:
New Pa	ssword: save



Standby Password

Check the standby password on the right of SolaxCloud Inverter page if you forget what you have set. Use the standby password to login the 5.8.8.8 Wi-Fi setting site and change a new password.

Solax Cloud

